


# Müeller Salad Spinner Pro

Model No:  
SS-1100

## Parts

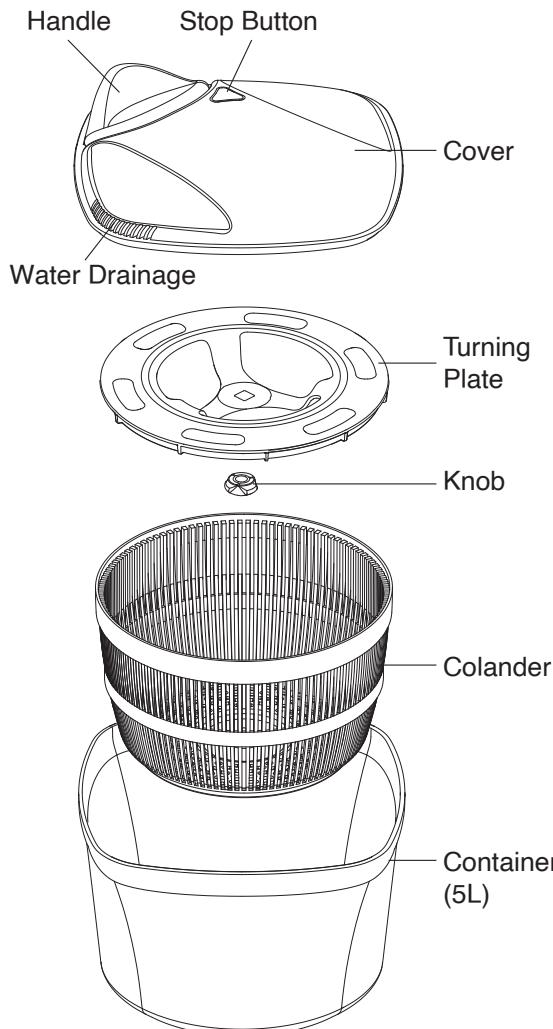

## How to Use



Place food in the colander.  
Rinse under running water to wash.



Insert the colander into the container.  
Attach the cover.



Hold the cover and pull the handle to spin. Pull/push as needed.



Press the button to stop the spinning.



Pour out excess water.  
Repeat Step 3 as needed.



When finished, unscrew the knob to detach parts for cleaning.

## Use & Care



- Use, wash and store with care. Keep out of reach of children!
- Use on a dry, clean and flat surface.
- Do not overfill.
- Container is for food prepping. Do not use for any other purpose.
- Wash and dry immediately after use to avoid staining.
- Do not use corrosive cleaning products or tools that may scratch the plastic.
- Dishwasher safe to a maximum temperature of 150°F/65°C. Hand washing of the Container is recommended to ensure the longevity of the rubber feet.
- Keep away from high heat. Do not use in the oven, or microwave oven.



reddot award  
winner

Our products are patent registered. We will and have taken legal action against any infringement or unauthorized reproduction, or any portion of it.  
Copyright © Müller. All rights reserved.