

CLEANING AND MAINTENANCE

- **Battery Care:** Use only the recommended battery type. Do not mix old and new batteries, or different types of batteries (alkaline, standard, rechargeable).
- **Cleaning:** Before cleaning, remove the batteries. Wipe the exterior with a damp cloth. Do not submerge in water, rinse under running water, or place in the dishwasher.
- **Storage:** Remove batteries if the can opener will not be used for an extended period. Store the appliance in a dry place, out of reach of children.

TROUBLESHOOTING

- **Can Opener Does Not Operate:** Ensure that the batteries have sufficient power, are installed correctly (+ -), and the battery cover is securely closed.
- **Slow Operation or Stopping:** This might indicate that the batteries are low. Replace with new batteries and try again.
- **Does Not Open Cans:** Check the can for any dents or damage along the edges. Ensure the blade and gear are correctly aligned with the can's rim.
- **Can Opener Does Not Turn Off:** The ON/OFF button was pressed too firmly. Push in again firmly to "release". In future, press the button lightly.

Customer Support: For further assistance, contact our customer support or visit our website.

Warranty: Visit <https://support.muellerhome.us/products/can-opener> to register your warranty.



WARNING:

The blade on the can opener is sharp.
Do not touch it with your fingers.

**SAVE THESE INSTRUCTIONS
FOR HOUSEHOLD USE ONLY**



Your purchase comes with a 100% satisfaction guarantee from Müller Home

If you are not happy with the product for any reason, please contact us at support@muellerhome.us with your feedback or questions, and we will do our best to make things right for you!

For warranty details visit www.muellerhome.us

Müller Home USA

2701 Kimball Ave, Pomona, CA 91767

E-mail: support@muellerhome.us

Web: www.muellerhome.us



SmoothEdge 3 Automatic Can Opener

Model: MBC-358

IMPORTANT SAFEGUARDS

To ensure your safety and the proper use of this can opener, please adhere to the following precautions:

- **Read All Instructions:** Before using this can opener, read this manual thoroughly.
- **Supervised Use:** This can opener is not intended for use by individuals (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they have supervision or instruction concerning the use of the can opener by a person responsible for their safety.
- **Children:** Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the can opener. Store out of reach of children.
- **Electrical Safety:** To avoid the risk of electrical shock, do not submerge in water, wash under running water, or wash in the dishwasher or other liquids.
- **Container Restrictions:** Do not use this can opener to open pressurized (aerosol-type) cans or cans containing flammable liquids such as lighter fluids.
- **Usage:** Avoid continuous operation. Use only as needed to maintain optimal performance and safety.
- **Moving Parts:** Avoid contact with moving parts during operation.
- **Attachments:** Use only attachments recommended by the manufacturer to avoid the risk of fire, electric shock, or injury.

• **Repair:** Do not dismantle the product by yourself. Contact Mueller Home Customer Support for assistance.

 
• **Indoor Use Only:** This can opener is designed for household use and not for outdoor applications.

• **Storage:** Keep away from flammable, explosive gas.

• **Batteries:** Do not incinerate the can opener, even if severely damaged. Batteries can explode in a fire.

• **Intended Use:** Do not use the can opener for any other purpose other than its intended use. Doing so may damage the product and void warranty assistance.


CAN OPENER PARTS

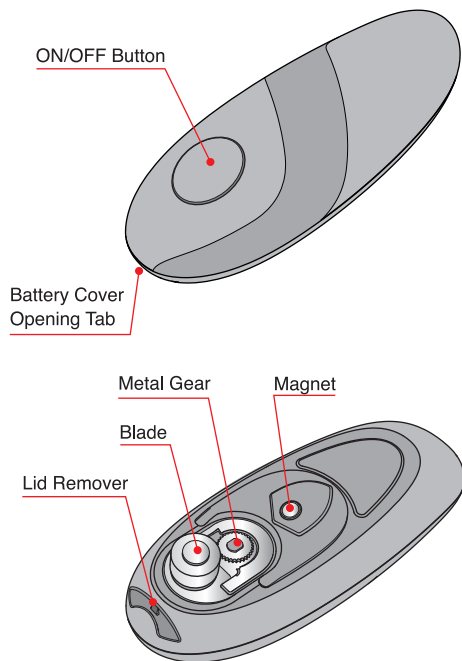


Requires 4 x AA Alkaline Batteries (Not Included)

HOW TO INSTALL THE BATTERIES

 1. Hold the can opener steady with one hand and use your other hand to lift the tab on the battery cover. Gently but firmly pull up to open.

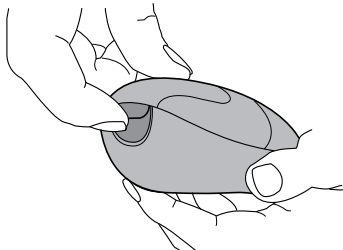

 
2. Insert four AA alkaline batteries, matching the + and - symbols to the correct ends. Secure the battery cover back into place.

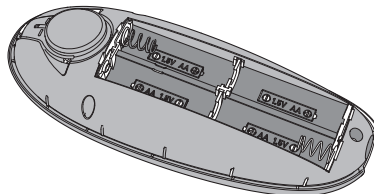


HOW TO USE

Suitable for cans up to 3 in diameter.

 1. **Position:** Place the can opener on top of the can, ensuring that the can edge fits securely between the blade and the metal gear.

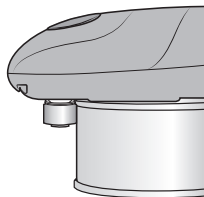

 2. **Start:** Gently press the ON/OFF button to start the cutting process, and let go. The can opener will rotate around the can automatically.

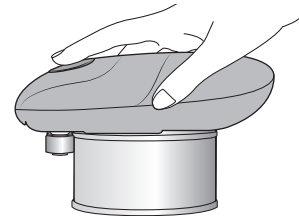

3. **Stop:** After one complete rotation, gently press the ON/OFF button again to stop the operation. The can opener will automatically detach from the edge of the can.

! IMPORTANT: Always press the ON/OFF button after one rotation to prevent the risk of over-cutting and potential metal shredding

4. **Lift:** Lift up the can opener and remove the lid from the magnet.

If the magnet fails to lift the lid, use the lid remover on the front of the can opener to pry the lid open.

If the lid remover can't pry the lid, it may be due to food adhering to the underside of the lid. Try to lift the lid manually instead.

