




# RAPIDBOIL PRO ELECTRIC KETTLE

Model No: MKX-777

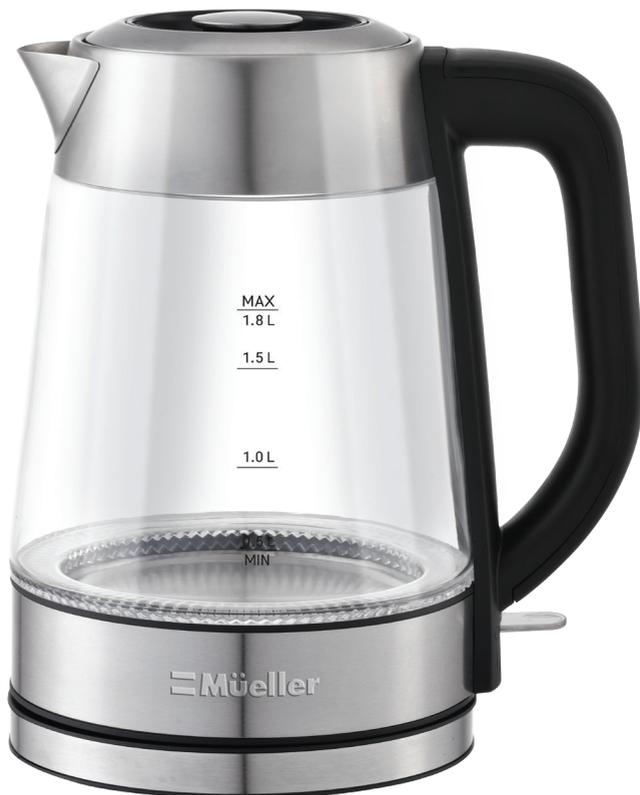

## Instruction Manual

---

*Your satisfaction is guaranteed. If you are not completely satisfied with our RapidBoil Pro Electric Kettle, please let us know. We're committed to making things right.*

---

# IMPORTANT SAFEGUARDS

Before using the Electric Kettle, the following basic precautions should always be followed:

- Read all instructions carefully and save them for future reference.
- Before use, check that the voltage marked on the rating plate matches your local supply.
- This appliance is intended for indoor household use only. Do not use this appliance for any purpose other than its intended use. Any other use may invalidate the warranty or may result in serious injury or harm.
- This appliance is not intended for use by any individual (including children) with reduced physical, sensory, or mental capabilities or lack of experience or knowledge without proper supervision or instruction from an adult or individual responsible for their safety and care.
- Do not leave the appliance unattended when in use.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not use a multiple adapter plug or extension cable; it may result in fire, electric shock, and/or personal injury due to a tripping hazard.
- Do not use the appliance if the plug, the mains cord, the base, or the appliance itself is damaged.
- Do not touch hot surfaces. Use the Handle. Surfaces will get hot during operation.
- Place the appliance on a flat, level, and stable surface. Do not let the cord hang over the edge of a table or counter, touch hot surfaces, or become knotted. Ensure the power cord does not touch the hot surface of the appliance.
- Do not place on or near a hot gas or electric burner, or on the top of another electrical appliance, or near an open flame.
- Do not use this appliance within reach of a bath, sink, or any vessel containing water or other liquids.
- To protect against fire, electrical shock, and personal injury, do not immerse the appliance in water or any other liquids.
- If the appliance is dropped in water, do not reach for it. Switch it off at the outlet, then disconnect it from the electric outlet. Drain the water before retrieving the appliance. Stop using the appliance until it has been checked by a qualified service agent.

- Do not operate outdoors or in any type of wet or extreme conditions.
- Always turn the appliance off at the power switch and remove the plug from the outlet before attempting to move the appliance when not in use, when no water is in the Kettle, or when filling water.
- Remove the power plug from the wall outlet before cleaning or when not in use. Allow the appliance to cool down completely before cleaning the appliance.
- Always grasp the power plug to remove it from the wall outlet. Do not pull on the power cord itself.
- Do not try and repair on your own. If the plug or power base is damaged, it must be replaced by the manufacturer to avoid a hazard.

## SAFETY INSTRUCTIONS

- Do not fill the Kettle beyond the maximum level indication (60 fl. oz. /1.8L).
- Do not operate if the water level is below the minimum (17 fl. oz. / 0.5 L).
- Do not fill the Kettle when positioned on the Power Base. Dry any water on the bottom of the Body before placing the Kettle onto the Power Base.
- This Kettle is to be used with the supplied power base only.
- Do not insert any object into the slots or holes of the Kettle.
- Do not touch the Power Base or bottom of the Kettle after use to avoid scalding or burns.
- Do not remove the Lid during the heating cycle. Scalding may occur. Never operate the appliance when the Lid is open or removed.
- Steam heat can cause burns. Use extra caution when opening the Lid immediately after the water has boiled. The steam coming out of the Kettle is very hot.
- Always follow the cleaning methods recommended in this manual. Never use harsh chemicals or abrasive materials to clean the Kettle.


**! CAUTION: HOT SURFACES! - This appliance generates heat and ejects steam during use. Proper precautions must be taken to prevent the risk of burns, fires, or other injuries and damage to your property.**



## WARNING!

- ! Do not use the Kettle to heat anything other than water.
- ! Do not operate without water.
- ! Do not operate without the Lid firmly secure.
- ! Do not remove the Lid while the water is boiling.
- ! Ensure that the Kettle is switched off before removing from the Power Base.

- ! **Never fill the Kettle beyond the Max fill line. If overfilled, boiling water may leak or eject from the Kettle and may cause scalding.**

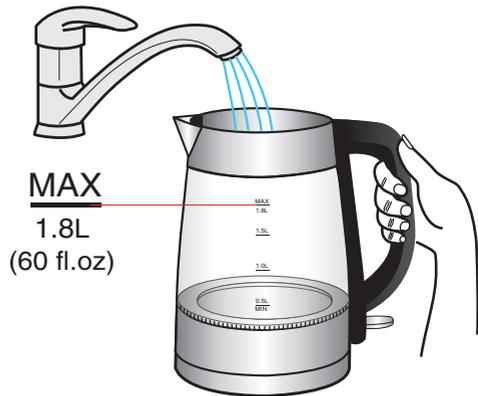


- ! **Avoid pouring water directly into the internal steam vent. This may result in leakage. Should leakage occur, wipe the Kettle dry before positioning on the power base.**



**SAVE THESE INSTRUCTIONS  
FOR HOUSEHOLD USE ONLY**

# PARTS

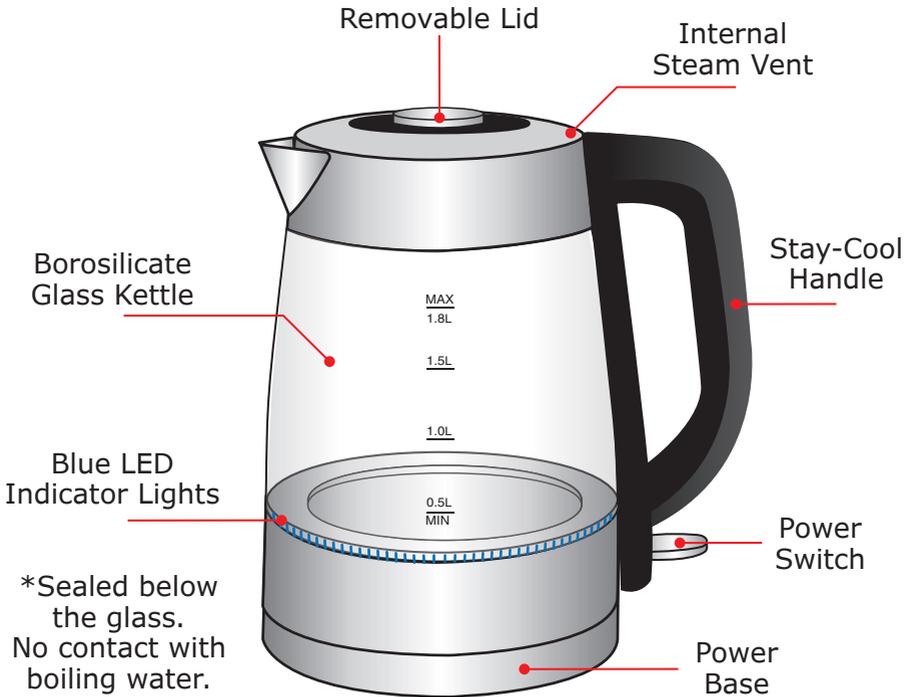

TESTED & CERTIFIED:



## TECHNICAL INFORMATION

Rated Voltage	Rated Power	Water Min / Max Capacity
110-120V	1250W-1500W	0.5L (17 fl. oz.) / 1.8L (60.9 fl. oz.)

# BEFORE FIRST USE

1. Check that the kettle is free of damage. Wipe the outside of the kettle with a clean, damp cloth to remove any factory residue or dust.
2. Fill the kettle with fresh water up to the maximum level. Secure the lid and push down the power switch to boil.
3. Discard water and repeat this process 2-3 times, rinsing out the inside of the kettle each time. The kettle is now ready for use.



OPTIONAL: Add two teaspoons of bicarbonate soda to the water before boiling to help eliminate any residual scent.

**! NOTE:** Allow the kettle to cool down for a couple of minutes before re-filling.

# INSTRUCTIONS FOR USE

## Automatic Switch-Off Protection

This Kettle is equipped with boil-dry protection. If it is accidentally switched on without water in it, the Kettle will automatically switch off.

Allow to cool for at least 15 Minutes then add water above the MIN level before boiling.

1. Place the Kettle and Power Base on a flat, stable, and level surface.



2. With the Power Switch off, remove the Kettle from the Power Base.

3. Lift and remove the Lid by its knob.



4. Fill the Kettle with the desired amount of fresh water.

- Fill above the MIN marking of **0.5L**.

- Do not overfill past the MAX marking of **1.8L**.



5. Secure the Lid. Place the Kettle on the Power Base.



6. Insert the plug into the power outlet. Press down the Power Switch lightly to turn it ON. The LED lights within the kettle will illuminate blue, indicating that the water is being heated up.




7. Once the water boils, the kettle and the blue LED lights will automatically turn off.

*Note: You can also turn the Kettle off at any time by lifting the Power switch to the OFF position.*




8. Unplug the kettle when not in use.

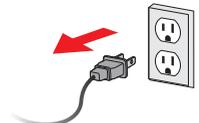

# CARE AND CLEANING

## WARNING

- Always unplug the Kettle from the power outlet and allow it to cool down before cleaning.
- Do not use chemical, steel wool, or abrasive cleaners to clean the appliance.
- The Kettle and the Power Base are NOT dishwasher safe.
- Do not immerse the Kettle, Power Base, or power plug in water or any other liquid.

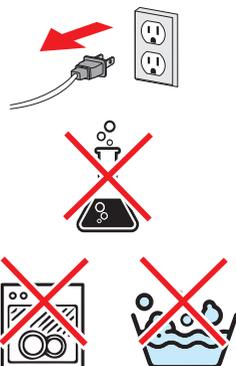

## CLEANING

We recommend cleaning the kettle periodically, and drain the water when not in use to avoid mineral build-up.

1. Remove the lid and wipe with a damp cloth. Do not wash under running water or in the dishwasher to avoid water build-up.
2. Wash the inside of the Kettle with hot water and mild dish soap. Rinse thoroughly.
3. Wipe the outside of the Kettle with a soft, damp cloth. Dry thoroughly.




## DESCALING THE KETTLE

We recommend decalcifying your kettle once a month (or more in hard water areas) for optimal performance.

1. Fill the kettle with equal parts clean water and white vinegar (or a descaler specifically for kettles). Eg. 2 cups vinegar: 2 cups water. Boil the solution, then let sit for 20 mins.



2. Pour the vinegar solution out and fill the kettle with water to the MAX fill line and then boil the water.

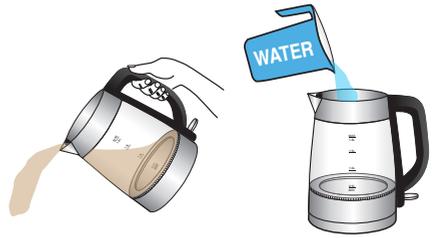

3. Empty the kettle and rinse 5 or 6 times.

4. If mineral deposits remain, repeat steps 1 – 3 up to two more times.



**IMPORTANT: Brown or reddish discoloration that may look like rust is actually mineral/iron buildup from water; This is NOT rust. The kettle interior is stainless steel and will not rust.**

## STORAGE

- Do not store with water inside for long periods of time. This can cause a build up of mineral deposits on the stainless steel.
- Ensure the kettle is switched off, clean, and dry before storing. Store the kettle in an upright position on the power base. Do not place anything on top.

# TROUBLESHOOTING

Issue	Cause	Solution
<p><b>Not turning on</b></p>	<ol style="list-style-type: none"> <li>1. Power outlet not working.</li> <li>2. Not sitting on power base correctly.</li> <li>3. Auto-Switch Off</li> <li>4. Limescale buildup.</li> <li>5. Power base faulty.</li> </ol>	<ol style="list-style-type: none"> <li>1. Test the outlet with another device to confirm it's functional.</li> <li>2. Ensure power base is level and clear of obstructions or misalignment.</li> <li>3. Allow to cool, then ensure water is above MIN level.</li> <li>4. Follow descaling instructions.</li> <li>5. Contact Mueller for assistance.</li> </ol>
<p><b>Spitting hot water</b></p>	<ol style="list-style-type: none"> <li>1. Overfilled past Max fill line.</li> <li>2. Lid not secure.</li> </ol>	<ol style="list-style-type: none"> <li>1. Pour out some water.</li> <li>2. Turn off, then secure lid correctly.</li> </ol>
<p><b>Leaking</b></p>	<ol style="list-style-type: none"> <li>1. Overfilled past Max fill line.</li> <li>2. Water entered internal steam vent hole of handle. (This vent has no contact with electrical components.)</li> <li>3. Crack in glass.</li> </ol>	<ol style="list-style-type: none"> <li>1. Pour out some water.</li> <li>2. Remove from power base. Drain water and wipe exterior dry.</li> <li>3. Inspect for damage.</li> </ol>

<b>Issue</b>	<b>Cause</b>	<b>Solution</b>
<b>Murky Glass or White Colored Stainless Steel Heating Base</b>	1. Limescale build-up	1. Follow descaling instructions.
<b>Rust-Like Spots</b>	1. Most discoloration in the form of brown, orange, or black spots are generally mineral deposits or iron from tap water that dries onto the surface.	1. Follow descaling instructions.
<b>Noise During Operation</b>	1. Limescale build-up	1. Follow descaling instructions.



## Your purchase comes with a 100% satisfaction guarantee from Müller

---

If you are not happy with the product for any reason, please contact us at [support@muellerhome.us](mailto:support@muellerhome.us) with your feedback or questions, and we will do our best to make things right for you!

For warranty details visit [www.muellerhome.us](http://www.muellerhome.us)

### **Müller USA**

---

2701 Kimball Ave, Pomona, CA 91767

E-mail: [support@muellerhome.us](mailto:support@muellerhome.us)

Web: [www.muellerhome.us](http://www.muellerhome.us)