



COMPACT MULTI CHOPPER/ SLICER

Model No:
MC-620



Instruction Manual

A practical and innovative way to beautifully slice, dice, grate, and shred your vegetables and fruits.

With the ***Compact Multi Chopper/Slicer***, preparing your favorite dishes for your whole family is no longer a chore. Its six interchangeable cutting blades offer the functionality of multiple kitchen tools in just one, highly versatile, kitchen gadget.

The high-quality stainless-steel blades will create perfectly chopped onions, tomatoes, and peppers for salsa, or slice an entire cabbage for coleslaw in no time.

Free-up space on your countertop, save time on food preparation, and have fun getting creative with your veggies!

Your satisfaction is guaranteed. If you are not completely satisfied with our Compact Multi Chopper/Slicer, please let us know. We'll do our best to make things right for you!

IMPORTANT SAFEGUARDS

The Mueller *Multi Chopper/Slicer* blades are VERY SHARP. Handle them with care when using and when cleaning the components.

Always hold the blade from its sides (plastic edge) to prevent injury.

Do not leave the Mueller *Multi Chopper/Slicer* or any components within reach of children.

Keep hands and utensils away from the cutting blade while chopping and slicing food to prevent the risk of human injury or damage to the *Multi Chopper/Slicer*.

Always place the *Multi Chopper/Slicer* on a firm and stable surface.

To reduce the risk of injury, always attach the Base securely to the Food Container before inserting the cutting blade into the Base.

To avoid injury, never use your hand to push food when slicing.

Do not use the device if it is damaged in any way. There is a serious risk of injury.

Use the device only with the accessories provided; otherwise, you will damage the device.

Use, wash, and store with care.


Never place the product on a hot surface or close to an open flame.

Do not put this product in an oven or microwave oven.

This product is designed for household use only. Do not use for any other purpose, other than the intended use.

SAVE THESE INSTRUCTIONS
FOR HOUSEHOLD USE ONLY

PARTS

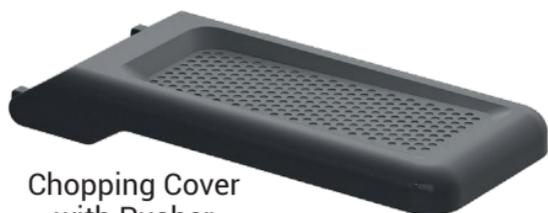

Chopping Cover
with Pusher



Base



Safety Holder



Cleaning Brush



Food
Container



Cleaning Forks



Small Dicer
 $\frac{1}{4}$ in



Large Dicer
 $\frac{1}{2}$ in



Slicer



Coarse Julienne



Coarse Grater



Grater

INSTRUCTIONS FOR USE

CHOPPING AND DICING

1. Connect the Base to the Food Container. Do this by inserting the edge of the Food Container under the plastic tab of the Base. Press down to lock together.




2. To connect the Chopper Cover to the Chopper Base, insert vertically at a 90-degree angle onto the two hinges. Push down to connect the parts. To remove, pull up firmly.



3. Select a Dicer blade. First, insert the nodes located on the top of the blade into the Chopper Base, then push down until you hear a "click".



4. Place the ingredient on the blade, flat side down. Ensure the ingredient is not larger than the blade surface.

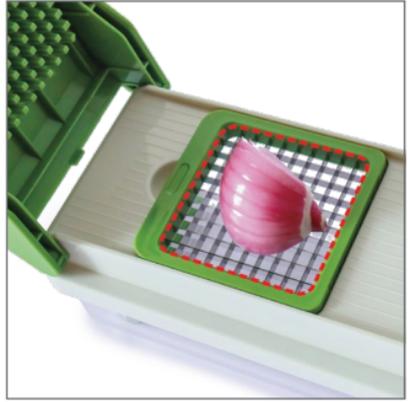

5. Use two hands to swiftly and firmly push down on the Chopping Cover.



6. Use the Cleaning Fork to clean the food residue from the Pusher teeth and blades.



7. To remove the blade, lift up firmly from the blade removal slot.



SLICING AND GRATING

1. Connect the Base to the Food Container. Do this by inserting the edge of the Food Container under the plastic tab of the Base. Press down to lock together.


! **Note, do NOT attach the Chopper Top for Slicing purposes.**

2. Select a Slicer or Grater blade. First, insert the nodes located on the top of the blade into the Chopper Base, then push down until you hear a "click".

3. To slice or grate, simply slide the food across the blade with one hand, while holding the Multi Chopper/ Slicer firmly with the other hand.

! IMPORTANT:

For your safety, always use the Safety Holder with smaller pieces of food or small remnants of larger pieces of food. Fix the food with the pins of the food holder. This stops the food from slipping while it is being sliced and makes it clean, safe, and easy to work with.

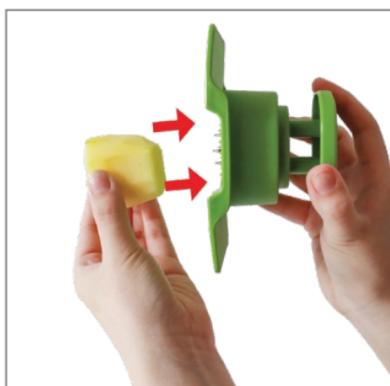


USING THE BLADES

IMPORTANT TIPS

To keep the Blades and the Pusher aligned, always chop ingredients to create a flat surface before placing them on the blade.

Do not insert ingredients larger than the blade surface.

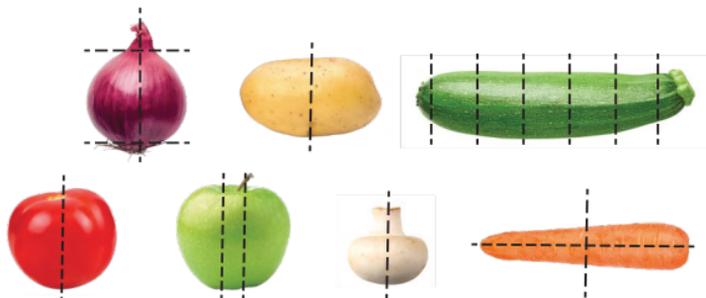

CHOPPING BLADES

Large Dicer 1/2in

Use the Large Dicer to dice onions, peppers, cucumbers, tomatoes, carrots, potatoes, and more.



Small Dicer 1/4in

Use the Small Dicer for a finer dice for ingredients such as garlic, chili, onions, and more.



SLICING AND GRATING BLADES


Slicer

This blade creates slices with a thickness of 2 mm. Use it to slice potatoes, cucumbers, lemons, radishes, fruits, and more.




Coarse Julienne

This blade creates precise vegetable strips. Use it to cut carrots, cucumber, zucchini, potatoes, radishes, and more.

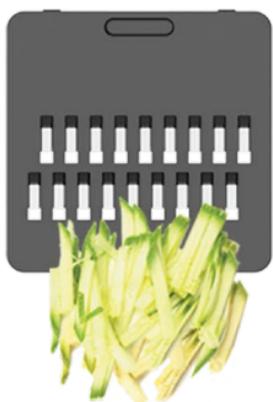

Grater

Use this grater blade to quickly grind lemons, limes, ginger, zucchini, and more.

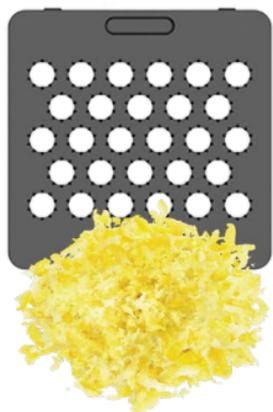

Coarse Grater

Use this grater blade for more precise grating of cheese, garlic, onions and more.



CLEANING AND STORAGE

For ease of clean-up, we recommend washing all parts as soon as possible after use.

To wash the parts, use warm, soapy water. Use the Brush included to help clean the blades, and the Cleaning Fork to help clean the Pusher (on the underside of the Chopping Cover). Use baking soda or lemon juice to remove stains caused by beets and carrots. After drying, store out of reach from children.

Parts are top rack dishwasher safe; keep temperature below 65°C / 150°F.





CAUTION

The *Multi Chopper/Slicer* contains sharp blades.
Handle with care when unpacking, assembling,
using, cleaning, and storing.
Do not leave within reach of children.



CAUTION! THE BLADES ARE VERY SHARP!

**U.S. PATENT
Pending**



**Your purchase comes with a 100%
satisfaction guarantee from Müller**

If you are not happy with the product for any reason, please contact us at ***support@muellerhome.us*** with your feedback or questions, and we will do our best to make things right for you!

For warranty details visit ***www.muellerhome.us***

Müller USA

2701 Kimball Ave, Pomona, CA 91767

E-mail: support@muellerhome.us

Web: www.muellerhome.us